


# HOW TO ASSEMBLE THE PLAQUE


## STEP 1

Firstly, remove the film from both sides of the unprinted Perspex. The printed and unprinted sheets go on top of each other so that they are touching. The wall-mounting spacers are then used to keep them together.

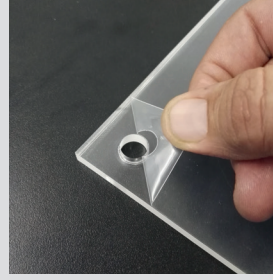


## STEP 2

Next you need to unscrew the top of the wall-mounting bracket.

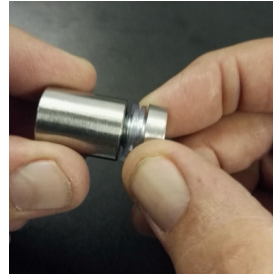


## STEP 3

Push the screw in part through the holes in the Perspex. Please place one washer on either side (top and bottom) of the plaque.

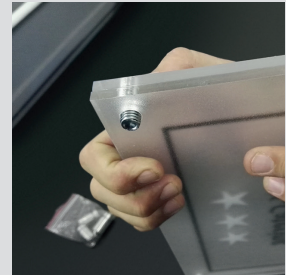

## STEP 4

You would have received four plugs and screws with the package. Once you have drilled the holes and got the plugs in the wall, drop the screw into the bigger part of the wall mounting. There is a hole at the bottom of the wall mounting where the screw needs to go.

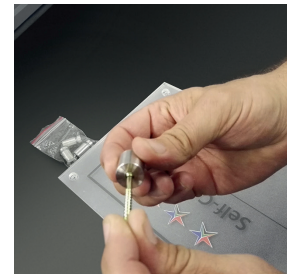

## STEP 5

Screw these into the plugs in the wall and then screw the piece that is going through the plaque into the piece that is now mounted onto the wall

